

Operating and Maintenance Intructions



SOG® + SOG® II - Type 3000A | for all Dometic CT3000/CT4000









Before removing the cassette, the hose must be pulled off the green hose connector.

Attach the black plug to the hose connector (green). Pull out the cassette and dispose of it appropriately.

Insert cassette, pull off plug (black), and attach the extractor hose onto the hose connector (green).

If you want to change a second cassette, then you can carry the full cassette in the storage space for several days. (There is no longer any gas formation if the cassette is full)

Only by door version:

Change the filter once a year!









Completely unscrew the 2 crosshead screws at the bottom

Push the cover cap up a little and remove at the front.

Take out the filter and insert a new filter into the existing

Place cover on the top - pull it forwards slightly at the bottom. Push the cover from top to bottom so that it locks into place.

Screw in screws ① and tighten slightly. Apply a light pressure on the cover while doing so.

Only by floor version: Change the filter once a year!

- $\bullet \ \, \text{Before changing the filter, pull the fan out of the rubber sleeve in the filter housing.}$
- Since the filter cartridge push-fits into the pipe, twist it back and forth while pulling it upwards and out.
- **3** Insert the new filter cartridge into the pipe.
- 4 You must moisten the rubber sleeve before inserting the fan into the filter cartridge.
- **6** Insert the fan as far as it goes, twisting it back and forth.



By roof version: maintenance-free