

REMOVING THETFORD LOCK BARREL FROM DOOR



Remove rear plate



Take a photo of springs so you know where they go.



Take out the barrel housing and remove blue cover



Remove rear seal



Press brass tab inwards and push barrel out.
Rebuild in reverse order.