
How to Replace the EXT\RET Switch

<u>Warning: Disconnect power before commencing.</u>

The EXT\RET switch is easy to replace. Just follow these steps.

EXT\RET Switch lugs

The switch has top and bottom plastic lugs that hold it in place.

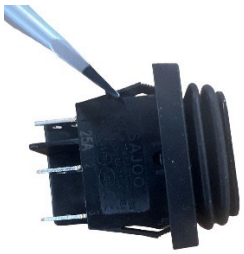

To remove the switch, take a flat blade screwdriver and gently pry the switch out at the top and the bottom. Take it slowly and the switch will gradually come out.





caravansplus. Products & support for this manual Shop Now

MANUAL COMPANION PAGE

Products related to this Black Jack Original Extend / Retract Switch Replacement Guide

Useful CaravansPlus links for parts, accessories, guides and support.

Shop over 8,000 caravan accessories.

Find related products, replacement parts and practical help from CaravansPlus.

- 8,000+ products
- Specialist support

Related product



Extend / Retract Switch - 25A - Suits Original Black Jack Electric Trailer Jacks

BJTJ-SW1 - Replacement EXT-RET switch for original Black Jack only, rated at 25 A. It does not fit Black Jack Mini,...more info.

View item

Helpful links



Black Jack Parts

Shop category



Appliances & Parts

Shop category



Towing & Car Accessories

Shop category




RV Accessories

Shop category



Awnings, Screens & Mats

Shop category

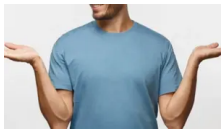

Search Products

Find parts



Guides & Articles

Helpful info




Contact Support

Ask us

Australian-owned • Caravan parts specialists • Australia-wide shipping

https://www.caravansplus.com.au

There are 3 rows of 2 terminals. The top and bottom operate the Extend and Retract functions. The middle 2 terminals are the power and negative wire for the 12-volt motor.

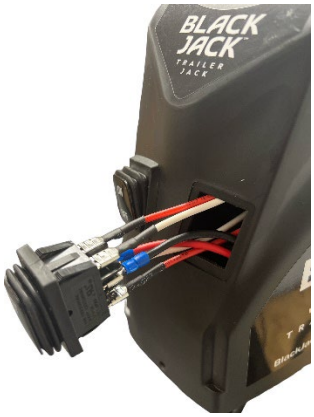

When the switch is out, use the flat blade screwdriver to remove one terminal at a time. Once the terminal is removed, place it in the same position on the new switch.





When all 6 terminals are replaced, gently push the new switch into the housing until it locks in place.

Reconnect power and test the switch operation.



All done, easy!