DOMETIC

INSTALLATION INSTRUCTIONS

RE-HINGING DOORS

To re-hinge the door, follow these steps:

1. Before working on the refrigerator, make sure the 230-240 V AC voltage and 12 V DC voltage leads are disconnected!
2. Detach the top decor panel by removing the two mounting screws (a) and the two knobs (b). Disengage seal strips (c). Remove the panel and place it aside.

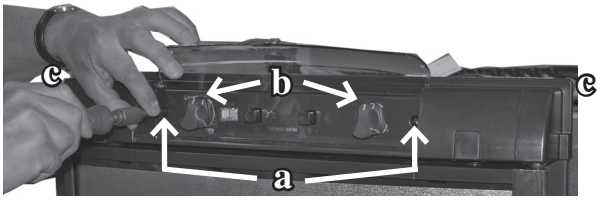

3. Use a socket wrench to loosen the upper hinge pin. Remove pin and save for later use.



4. Lift door off the lower hinge pin. Place door on soft material to prevent any damage to the door.



5. Remove lower hinge pin.

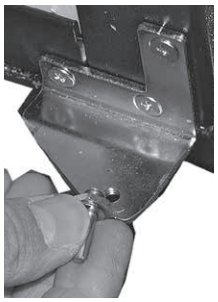

6. Remove lower hinge by unscrewing the three screws. Save screws for later use.

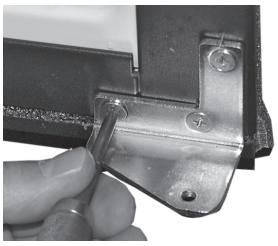

7. Remove plugs that cover the screw holes located on the side opposite of the present hinge location.

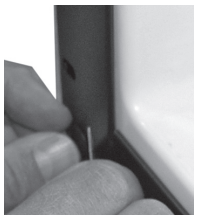

8. Locate the new hinge, insert hinge pin into hinge hole and fasten the hinge with the three screws removed earlier.

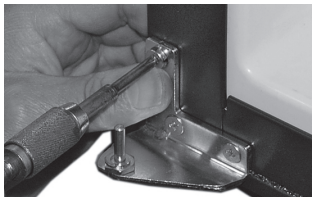

9. Insert plugs to cover the unused screw holes on the opposite side.

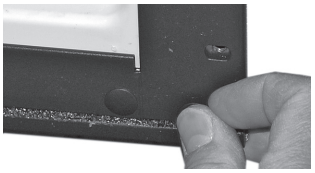

caravansplus. Products & support for this manual Shop Now

MANUAL COMPANION PAGE

Products related to this Dometic RM2350 / RM2355 Door Rehinging Instructions

Useful CaravansPlus links for parts, accessories, guides and support.

Shop over 8,000 caravan accessories.

Find related products, replacement parts and practical help from CaravansPlus.

- 8,000+ products
- Specialist support

Related products



Door Hinge Kit - Left-Hand - Suits Dometic RM2350 / RM2355 Fridges with Black...

3850304068 - Use this kit to fit or replace the left-hand hinges on the main door of a Dometic RM2350 or RM2355...more info.

View item



Door Hinge Kit - Right-Hand - Suits Dometic RM2350 / RM2355 Fridges with Black...

385030405 - Use this kit to fit or replace the right-hand hinges on the main door of a Dometic RM2350 or RM2355...more info.

View item

Helpful links

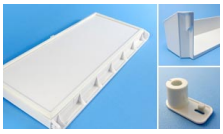

Door Parts

Shop category

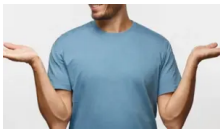

Search Products

Find parts



Guides & Articles

Helpful info



Contact Support

Ask us

Australian-owned • Caravan parts specialists • Australia-wide shipping

https://www.caravansplus.com.au

10. Unscrew screws and remove upper hinge and travel catch. Save screws for reinstallation.

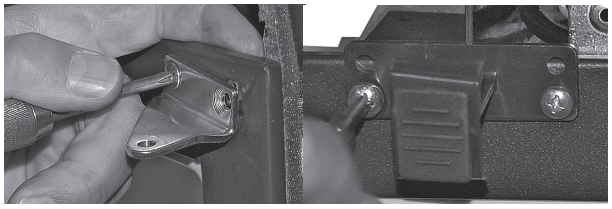

11. Flip travel catch upside down and install on the opposite side of its present location. Install a new hinge. Fasten with the screws removed earlier.



12. Locate the door. Remove plug and latch retainer on the top of the door. Replace in opposite positions.

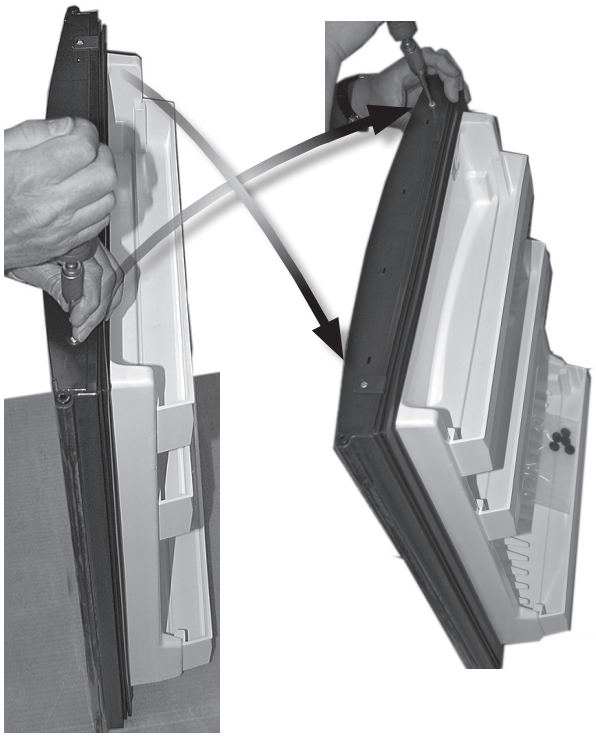

13. Place door on lower hinge pin (a). Mount upper hinge pin (b) and fasten it using a socket wrench (c). Close the door.



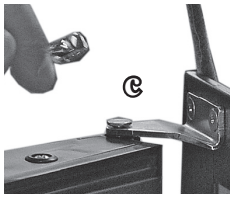

14. Locate top decoration panel and detach the travel catch. Replace in opposite position.

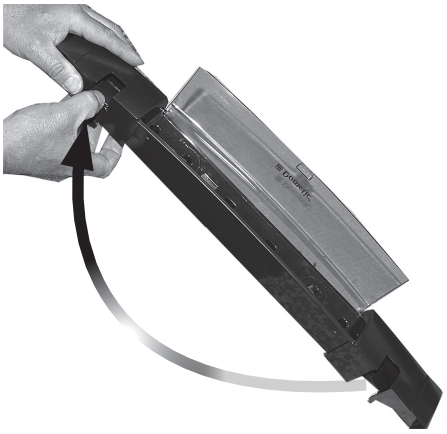

15. Fit top decoration panel.



16. Reinstall screws, knobs and seal strips.



17. Check the travel catch to make sure it works properly, that the door closes easily and that the gasket seals well on all sides.
18. Reconnect the refrigerator.