


Wiring Instruction

75ohm Coaxial Cable TV Antenna Sockets 30TV75M

Also used in 30TV75S products. These sockets are designed to accommodate solid core conductor coaxial cables with insulation (dielectric) up to approximately 5mm diameter for solderless connections. This includes the majority of popular cables, e.g. TM3502, S.S.A.37, R.G.6/U and R.G.59/U.

The cable shield connection sleeve of the socket fits the smaller cables but slits in the sleeve enable it to be expanded to accommodate the large cables if required. This can be done by inserting a screwdriver blade evenly into each slit to sufficiently enlarge the sleeve to suit.

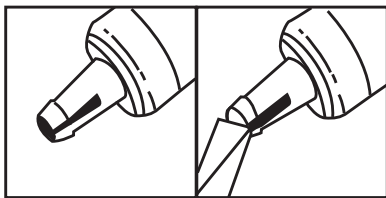

Sleeve suits smaller cables.

Open slits with screwdriver blade to suit larger cables.

Stripping Details



Strip off black outer casing 10mm from end of cable.

Trim aluminium foil or copper braid shield flush with end of black outer casing. Strip off 3mm of the exposed insulation (dielectric) leaving 7mm of centre conductor exposed (illustration is actual size and can be used as a template).

Slip ferrule over cable and insert sleeve between insulation (dielectric) and the aluminium foil or copper braid shield. Push in until outer sheathing butts against socket body. Centre conductor of cable automatically engages with centre contact of socket. Position ferrule against socket body and crimp tightly with a suitable crimping tool or pliers.

Clipsal products 30TV75M and 30TV75S suit all standard 10mm plain shank 75ohm coaxial cable plugs.

Product of Clipsal Australia Pty Ltd

A member of Schneider Electric

clipsal.com

Contact us clipsal.com/feedback

Clipsal Datacomms Enquiries:

Tel 1800 728 728

Clipsal Australia Pty Ltd reserves the right to change specifications, modify designs and discontinue items without incurring obligation and whilst every effort is made to ensure that descriptions, specifications and other information in this catalogue are correct, no warranty is given in respect thereof and the company shall not be liable for any error therein.

© Clipsal Australia Pty Ltd.

The identified trademarks and copyrights are the property of Clipsal Australia Pty Ltd unless otherwise noted.

F240/02

CLIPCOM 16256 June 2008

MANUAL COMPANION PAGE

Products related to this Clipsal 30TV75S Coaxial Socket Wiring Instructions

Useful CaravansPlus links for parts, accessories, guides and support.

Shop over 8,000 caravan accessories.

Find related products, replacement parts and practical help from CaravansPlus.

8,000+ products

Specialist support

Related product



Surface-Mount Coaxial Socket - 75 Ohm - PAL

500-03110 - Coaxial socket 75 ohm angle socket suitable for external fitting in white only. These accept coaxial...more info.

[View item](#)

Helpful links



Sockets & Plugs

Shop category



Appliances & Parts

Shop category



Towing & Car Accessories

Shop category




RV Accessories

Shop category




Awnings, Screens & Mats

Shop category

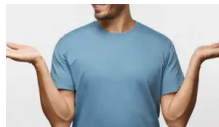

Search Products

Find parts

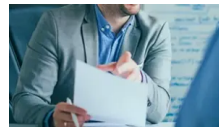

Guides & Articles

Helpful info



Contact Support

Ask us

Australian-owned • Caravan parts specialists • Australia-wide shipping

<https://www.caravansplus.com.au>

CLIPSAL TV/FM SOCKETS IMPORTANT SAFETY PRECAUTIONS

When mounted with switches, units must be installed by a qualified electrician. Ensure TV/FM and electrical connections are properly segregated by fitting protective shrouds to **both** units. Where TV/FM accessories and their associated cabling are to be installed in proximity to systems above 32V, it is essential that the installation be done in accordance with the relevant sections of Wiring Rules AS/NZ3000, including the section on *Segregation of wiring systems*.